


# **CL-287**


12V LED Integrated Rail Light with Replaceable LED Capsule



- WARRANTY-Ten years warranty from date of invoice.
- RATED LIFE- 50,000 hours

### ASSEMBLY/INSTALLATION INSTRUCTION

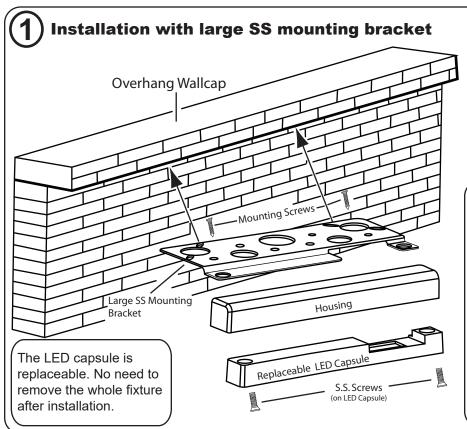

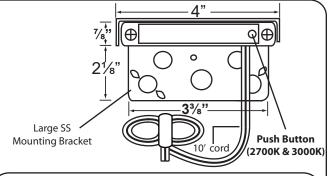


### **Assembly & Installation Instructions**

- Remove the LED Capsule by unscrewing 2 SS screws. Keep large bracket inserted on the housing.
- Get the cord out of wall and install large bracket under wallcap by two mounting screws
- Install the LED Capsule into the housing by two SS capsule screws.
- Connect the main cable to fixture cord by using UL listed wire connector (supplied seperately).
- Fixture should "ONLY" be used with low voltage landscape power units that do not exceed 25A, 18V.
   The power unit reduces the voltage from 120V to 12 volts.
- This fixture should be used above ground ONLY.

## 2 Installation with "Small" Bracket

To be installed on wall, shining horizonally.

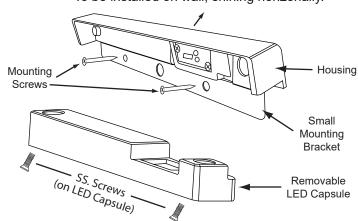

### **Assembly & Installation Instructions**

- Remove LED capsule and large SS Bracket
- Insert "small" bracket into the housing, get the cord out of the wall and install the bracket on the wall by 2 mounting screws.
- Install the LED capsule into the housing by SS 2 screws.
- Connect the main cable to fixture cord by using UL wire connector (supplied seperately).

# 3 Installation with "L" Shape Bracket

Mounting Screws

Housing

To be installed on wall, shinning down.

"L" Shape Mounting Bracket

Removable LED Capsule

### **Assembly & Installation Instructions**

- Remove LED Capsule and large SS Bracket.
- Insert "L" bracket into the housing, get the cord out of the wall and install the "L" bracket on wall by 2 mounting screws
- Install the LED capsule into the housing by 2 SS capsule screws.
- Connect the main cable to fixture cord by using UL wire connector (supplied seperately)